



Opti-Lite® Installation

Vision Panel

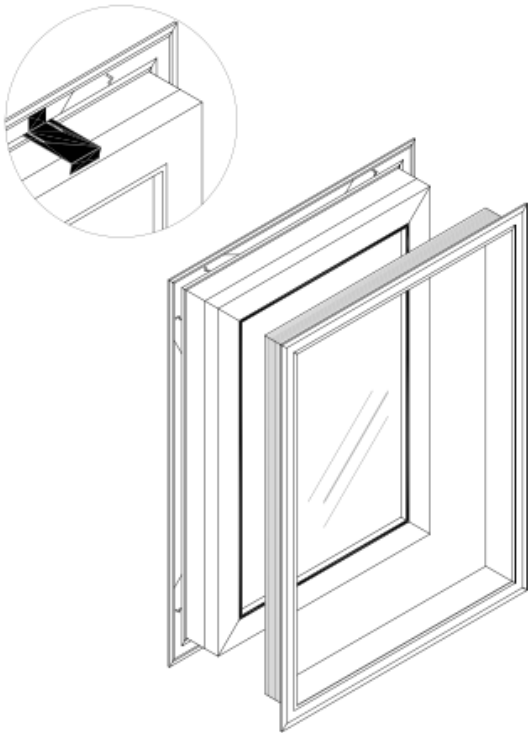


Opti-Lite Installation Instructions

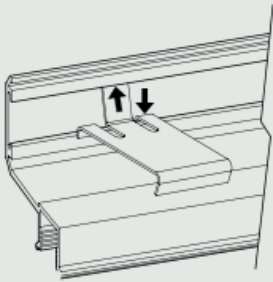


Step 1.

Insert clip so that middle tab fits into upper groove and one side tab fits into lower groove.

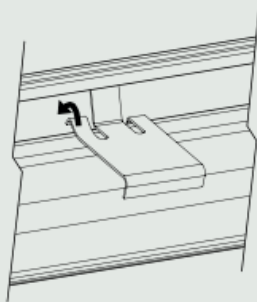


Step 2.

Pry second side tab into lower groove using screw driver.

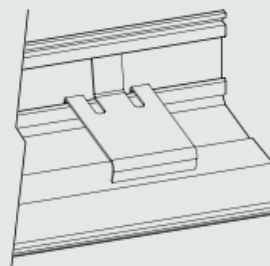

Step 3.

Ensure clip is installed correctly and repeat for all clips provided. Space clips proportionally on all four sides.

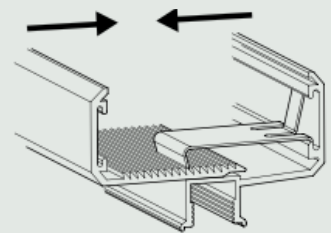

Step 4.

Place front frame into opening and press back frame into position from opposite side of the door, ensuring clips catch as shown.

Note

Using silicon seal to inside of flange will prevent movement within opening after installation. Removal of Opti-Lite® Door Vision Panel after installation may result in damage to the clips and possibly the frame.